Operating instructions
Bearpaw – Shafter
Art.Nr. 50074

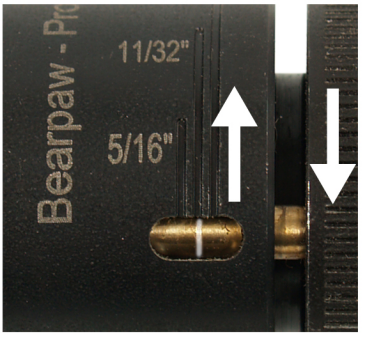

Description

1. Shaft
2. Corpus
3. Guide bushes

5/16
11/32
23/64

Adjust the shafter to the shaft diameter you need by turning the corpus.

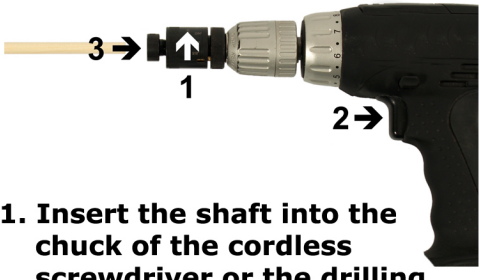

1. Insert the shaft into the chuck of the cordless screwdriver or the drilling machine and tighten it.
2. Press the switch of the machine and give speed to the shafter.
3. Insert the wooden shaft straightly and carefully with little pressure through the appropriate guide bush into the shafter as far as it will go.

1. Clean (degrease) the Bearpoint- arrow-head with alcohol or spirit.
2. Coat the compressed surface thinly with blended epoxy resin.
3. Move the arrow-head over the compressed surface onto the shaft.